

# PRESIDENT

## PM-1050 SWF



### Owner's Manual



# MAKING A DISTRESS CALL

For future reference, write your boat's name & call sign here:

## Speak slowly - clearly - calmly.

1. Make sure your radio is on.
2. Press the **16/9-Tri** key to switch to Channel 16 (156.8 MHz). (If the corner of the display does not show 16, press the **16/9-Tri** button again until it does.)
3. Press the **push to talk** button and say: "**MAYDAY – MAYDAY – MAYDAY.**"
4. Say "**THIS IS** *{name of your boat (three times) and call sign/boat registration number (once)}*."
5. Repeat "**MAYDAY** *{name of your boat}*" once.
6. Tell where you are: (what navigational aids or landmarks are near, or read the latitude and longitude from your GPS).
7. State the nature of your distress, (e.g. sinking, medical emergency, man overboard, on fire, adrift, etc).
8. State the type of assistance you need (medical, towing, pumps, etc.).
9. Give number of persons aboard and describe conditions of any injured persons.
10. Estimate present seaworthiness of your ship (e.g. how immediate is the danger due to flooding or fire).
11. Briefly describe your ship, giving the ship name (i.e. "Blue Duck is 32 foot cabin cruiser, white hull, blue deck house").
12. Say: "**I WILL BE LISTENING ON CHANNEL 16.**"
13. End message by saying "**THIS IS** *{name or call sign of your boat}*, **OVER.**"
14. Release the **push to talk** button and listen.

**If you do not get an answer after 30 seconds, repeat your call, beginning at step 3, above.**

# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	5
Features .....	5
<b>GETTING STARTED</b> .....	7
What's included .....	7
Parts of the PM-1050 SWF .....	8
Front view .....	8
Back view .....	8
Charger .....	9
Reading the display .....	10
Display icons and what they mean .....	10
<b>HOW IT WORKS</b> .....	11
Normal mode operation .....	11
Normal mode with Weather Alert Watch .....	12
Normal mode with Triple Watch or Dual Watch .....	12
Scan mode operation .....	13
Using the radio in scan mode .....	13
Scan mode with Weather Alert Watch .....	13
Scan mode with Triple Watch or Dual Watch .....	14
Weather mode .....	14
Using the radio in weather mode .....	14
Weather mode with Weather Alert Watch .....	14
Weather mode with Triple Watch or Dual Watch .....	15
<b>SETTING UP THE HARDWARE</b> .....	15
Install the Battery Pack .....	15
Mounting the Charger .....	15
Charging the Battery .....	16
Important notes on charging the battery .....	16
Installing and Removing the Belt Clip .....	16
<b>USING YOUR RADIO</b> .....	17
Changing the Volume .....	17
Setting the Squelch Level .....	17
Changing the Channel .....	17
Making a Transmission .....	18
Boosting the transmission power .....	18
Setting Key Lock .....	18
Setting the UIC Channel Mode .....	19
Turning the Key Beep On and Off .....	19

Saving a Channel to Memory .....	19
Scanning Channels in Memory.....	19
Battery Save Feature.....	19
<b>MAINTENANCE AND TROUBLESHOOTING</b> .....	19
Common Questions.....	20
<b>SPECIFICATIONS</b> .....	21
<b>CHANNELS AND FREQUENCIES (MHZ)</b> .....	22
US channel frequencies and names.....	22
Canadian channel frequencies and names .....	23
International channel frequencies and names.....	25
Weather channel frequencies and names.....	27
<b>REGULATIONS AND SAFETY WARNINGS</b> .....	28
Basic Radio Guidelines .....	28
Three Year Limited Warranty .....	30

## INTRODUCTION

### Features

- **Memory scan mode**  
Lets you save channels to memory and monitor them in quick succession.
- **Transmitter power level select**  
Lets you boost the transmitter power from L (Low = 1 Watt) to M (Medium = 2.5 Watts) or H (High = 6) Watts for added transmission distance.
- Battery level display.
- **Battery Save**  
Unit turns off RX power after 3 seconds without RX or TX.
- **Dual and Triple operation**  
These different watch modes let you monitor up to two Coast Guard Distress/Hailing channels along with one regular marine channel.
- All marine VHF channels for the U.S., Canada, and international waters
- **National Oceanic and Atmospheric Administration (NOAA) Weather Channel watch Sounds a warning tone when a hazard alert is issued.**
- **Keylock On/Off**  
Locks the keys to prevent accidental input.
- 9 built-in weather channels.

## Waterproof Specifications

The PM-1050 SWF is a submersible radio, complying with floating JIS7/IPX7 water-resistant standards. The radio can be submerged in 1 meter of water for 30 minutes without damage.

**CAUTION ! The radio will only meet this rating if fully assembled and all rubber seals are well maintained and correctly fitted. This means that the battery and casing must be securely fastened.**

After your radio is submerged in water, you might notice that the sound is distorted. This is because there is still water remaining in and around the speaker and microphone. Just shake the radio to clear excess water, and the sound should return to normal.

If your radio is exposed to salt water, clean it thoroughly with fresh water and dry it before turning it on.

The charger is not waterproof.

# GETTING STARTED

## What's included



PM-1050 SWF



Charger



Lithium Ion Battery



AC Adapter



DC Adapter



Mounting Hardware



Belt Clip


If any pieces are missing or damaged, contact **PRESIDENT** Customer Service (see back cover for contact information).

# Parts of the PM-1050 SWF

## Front view




## Back view

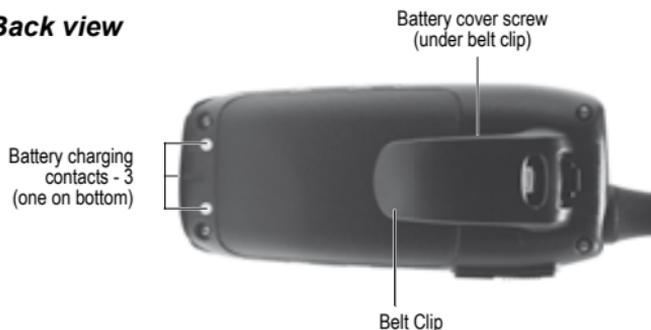


Key	Press to...	Press and hold to...
<b>Channel Up/Channel Down</b>	Move up or down one channel at a time.	Move quickly up or down the channels.
<b>Push to talk</b>	NA	Transmit on a channel
<b>6W/BOOST</b>	NA	Boost transmission power to 6W.
<b>16/9-Tri</b>	1st press: Go to channel 16. 2nd press: Go to channel 9. 3rd press: Go back to the starting channel.	Turn Triple Watch on and off.
<b>L/M/H-MEM</b>	Change the transmit power (see page 18).	Save a channel into memory or delete a channel from memory.
<b>WX ALERT</b>	Listen to the weather channels.	Turn Weather Alert Watch on and off.
<b>Volume-Squelch</b>	Enter Volume Setting mode. Use <b>Channel Up</b> and <b>Channel Down</b> to raise and lower the volume (Levels = 0 - 15).	Enter Squelch Setting mode. Use <b>Channel Up</b> and <b>Channel Down</b> to raise and lower the squelch settings (Levels = 0 - 3).
<b>Power</b>	NA	Turn the radio on and off.
<b>SCAN DUAL</b>	Start scanning the channels saved in memory.	Turn Dual Watch on and off.
<b>Lock-UIC</b>	Lock the keys; press again to unlock.	Switch between US, Canadian, or international channels.

## Charger

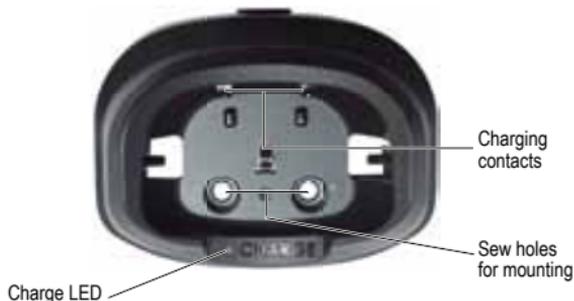

## Reading the display

The LCD display shows different information depending on what you are doing. This sample screen shows some of this information. The table below shows all the possible icons and what they mean.

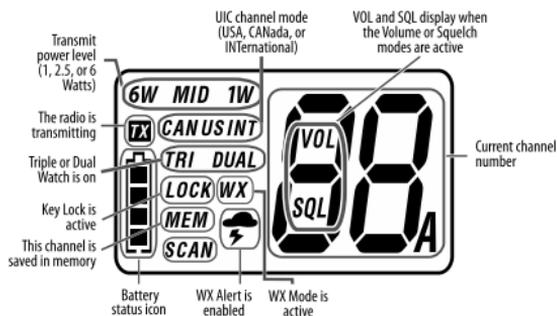

### Display icons and what they mean

Icon	What it means
<b>6W, MID, or 1W</b>	The transmitter power is set to 6 Watts, MID (2.5 Watts), or 1 Watt.
<b>TX</b>	You are currently transmitting.
<b>CAN, US, or INT</b>	The radio is set to use CANAdian channels, US channels, or INternational channels.
<b>TRI or DUAL</b>	TRIPLE Watch or DUAL Watch is turned on.
<b>LOCK</b>	The keys are locked (Key Lock function is on).
<b>WX</b>	The radio is in Weather mode.
<b>MEM</b>	The current channel is saved in memory.
<b>SCAN</b>	The radio is in Scan mode.
	Weather Alert Watch is turned on.
	The battery is fully charged, mostly charged, half charged, mostly empty, or completely empty.
<b>VOL</b>	Displays when Volume mode is turned on.
<b>SQL</b>	Displays when Squelch mode is turned on.

# HOW IT WORKS

Your radio has three main operation modes: normal, scan, and weather.

Mode	What it does	Use it when you want to...	To turn it on/off
Normal	Monitors a single marine channel and lets you talk on that channel.	Monitor a channel or talk to another radio.	(default mode)
Scan	Monitors all the channels you save into memory.	Check a small group of regularly-used channels for traffic.	Press <b>SCAN/DUAL</b> .
Weather	Monitors the selected NOAA weather channel.	Hear the current or forecasted weather.	Press <b>WX/ALERT</b> .

In addition to the three operation modes, your radio provides four different watch modes which you can activate during any operation mode. In the watch modes, the radio briefly checks for activity on a specific channel, then returns to its previous operation.

Watch mode	What it does	To turn it on/off
Weather Alert Watch	Checks the last-used weather channel for hazard alerts every 7 seconds.	Press and hold <b>WX/ALERT</b> for 2 seconds.
Dual Watch	Checks channel 16 for activity every 2 seconds.	Press and hold <b>SCAN/DUAL</b> for 2 seconds.
Triple Watch	Checks channels 16 and 9 for activity every 2 seconds.	Press and hold <b>16/9/TRI</b> for 2 seconds.



**Note:** Private boats must monitor channel 16 whenever they are underway. Water-going vessels should have either Triple Watch or Dual Watch on at all times.

## Normal mode operation


- To transmit, remove the radio from the charger, then press and hold the **Push to Talk** key. Release the key when you are finished talking.
- For the best sound quality, hold the microphone about two inches from your mouth while you're talking.

- Press the **Channel Up** key to move up one channel at a time. Press and hold the key to scroll quickly up the channels.
- Press the **Channel Down** key to move down one channel at a time. Press and hold the key to scroll quickly down the channels.
- To change the transmit power, press the **L/M/H MEM** key.

The transmit power switches to the next transmit power each time you press this key.

### **Normal mode with Weather Alert Watch**


If you activate Weather Alert Watch while operating in normal mode, the radio checks the most recently used weather channel every seven seconds. If it detects a weather or other hazard alert, it will switch to that weather channel. (If you are actively transmitting, the radio waits until you finish your transmission before checking the weather channel).

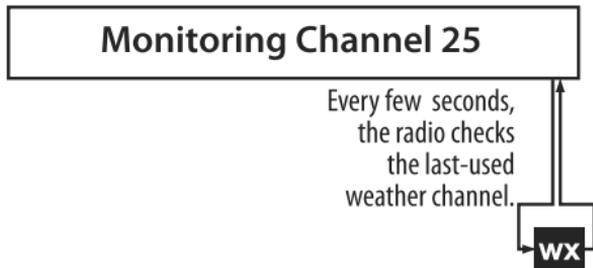

**WX Alert Watch on**

### **Normal mode with Triple Watch or Dual Watch**

If you activate Triple Watch while operating in normal mode, the radio checks channels 9 and 16 every two seconds; with Dual Watch turned on, the radio only checks channel 16. The radio will not check channels 9 or 16 while you are actively transmitting; it waits until your transmission is finished and then checks the channels.

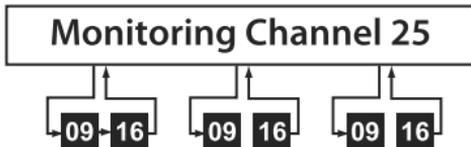


Every 2 seconds, the radio checks channels 9 & 16.

**Triple Watch on**

## Scan mode operation

You can save channels into memory and then use scan mode to monitor those channels from lowest to highest. If the radio detects a signal on a channel, it stays on that channel as long as the signal is received; when the signal stops, the radio continues scanning.

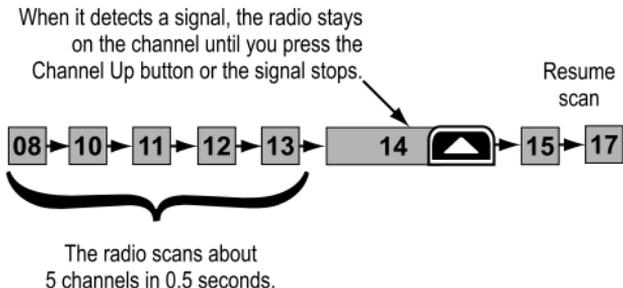


### Using the radio in scan mode

- To activate scan mode, press **SCAN DUAL**.
- You must have at least two channels in memory to start a scan.
- You cannot transmit while in scan mode.
- To save a channel into memory, select the channel, then press and hold the **L/M/H MEM** key. The “MEM” icon displays whenever you tune to that channel.
- To remove a channel from memory, set the radio to that channel, then press and hold the **L/M/H MEM** key. The “MEM” icon no longer displays.
- When the radio stays on a channel, press **Channel Up** to leave that channel and resume scanning.
- To end the scan, press the **SCAN DUAL** key again; the radio remains on the last scanned channel.

### Scan mode with Weather Alert Watch


If you activate Weather Alert Watch while in scan mode, the radio checks the most recently-used weather channel every seven seconds,

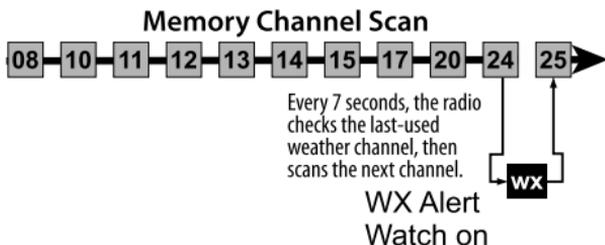

then continues scanning the next channel in memory:

### **Scan mode with Triple Watch or Dual Watch**

If you activate Triple Watch while operating in scan mode, the radio checks channels 9 and 16 every two seconds, then goes on to scan the next channel; with Dual Watch turned on, the radio only checks channel 16:

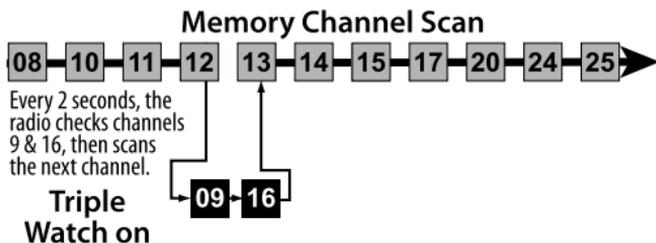

## **Weather mode**

The NOAA weather channels now cooperate with the FCC to alert you of other hazards besides weather (child abduction alerts, nuclear, biological, etc.). In weather mode, the radio monitors one of the nine NOAA weather channels. If any type of alert is received, the radio sounds an alert tone and the display blinks.

### **Using the radio in weather mode**


- You cannot transmit while in weather mode.
- To enter weather mode, press the **WX ALERT** key.
- To turn off the radio's alert tone, press any key.
- To cancel weather mode and return to the previous marine channel, press the **WX ALERT** key again.

### **Weather mode with Weather Alert Watch**

Because weather mode already monitors the weather channels, you don't need Weather Alert Watch to check the weather channel every seven seconds. If you activate Weather Alert Watch while operating in weather mode, it operates as a type of "sleep mode": the radio stays on the weather channel and mutes the speaker. If an alert is detected, the radio sounds an alert tone and turns the speaker back on. This mode is very useful when you are anchoring for the night but want to keep informed of hazards.

## Weather mode with Triple Watch or Dual Watch

If you activate Triple Watch while operating in weather mode, the radio checks channels 9 and 16 every two seconds; with Dual Watch turned on, the radio only checks channel 16.

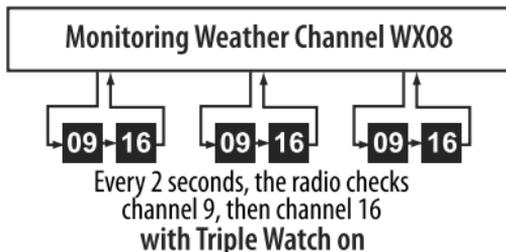

## SETTING UP THE HARDWARE

### Install the Battery Pack

Your radio uses the supplied Lithium Ion battery pack. To install the Lithium Ion battery pack:

1. Remove the belt clip if installed.
2. Use a screwdriver to turn the battery compartment screw counterclockwise and then lift up and remove the battery cover.
3. Line up the new battery's connector with the jack inside the battery compartment (the connector only fits one way).
4. Push the connector in firmly. Tug on the battery wires gently to make sure you have a good connection.
5. Before replacing the battery cover, check the rubber seal located on the under side of the cover; make sure that the seal is set in the groove and that there is no foreign matter under the seal.

 **Note:** If the rubber seal appears worn, nicked, or dried out, you must replace it. New seals are available through the Parts Department (see the cover page for contact information).

6. Replace the battery compartment cover. Tighten the screw securely.

### Mounting the Charger

You can mount the charger on any flat surface.

1. Use the two holes at the base of the charger as a template to mark the drill holes.



2. Using a 3 mm (or 1/8 inch) drill bit, drill two holes 13 mm (1/2 inch) deep.
3. Use the provided screws to attach the charger to the surface.

## Charging the Battery

Your radio includes a charger and a rechargeable battery pack. Place your radio in the charger with the display facing forward. Make sure that the CHARGE LED on the charger turns orange.



### **Cautions:**

- Use only the battery and charger supplied with this radio. Using a different charger or battery can damage the radio and create a risk of fire or shock.
- The charger is not waterproof. If the charger falls into the water, unplug it before attempting to remove it from the water. After you remove the charger from the water, please contact Customer Service (see the back cover page for contact information).
- Wipe off dirt or shake water from your radio before placing in the charger if your radio gets dirty or wet.

### ***Important notes on charging the battery***

- Charge the battery fully before using the radio. When the battery is completely charged, the CHARGE LED turns green.
- Don't use the charger when the ambient temperature is below 5° C (41° F) or above 40° C (104° F).
- If the radio is powered down, the battery can charge in about seven hours. (If the radio is powered on, the battery takes longer to charge.)

## Installing and Removing the Belt Clip

To install the belt clip:

Slide the belt clip down over the latch until you hear it click.

To remove the belt clip:

1. Lift the flat latch.
2. Slide the clip up until it comes free of the latch.

# USING YOUR RADIO

## Changing the Volume


To increase the speaker volume, press the **VOL SQL** key. The screen displays “VOL” and a volume level number. Use the **Channel Up** and **Channel Down** keys to raise or lower the volume. Press the **VOL SQL** key again to set the volume level and return to the main display. There are 16 volume levels - 0 (mute) to 15.

## Setting the Squelch Level

The squelch feature reduces static on the speaker by filtering out any background channel noise. At the lowest squelch level, the speaker plays all signals, including any channel noise.

Setting the squelch level higher filters out noise and lets only actual radio transmissions through.

To adjust the squelch level, press and hold the **VOL SQL** key. The screen displays “SQL” and a SQUELCH level number (0 - 3). Use the **Channel Up** and **Channel Down** keys to adjust the squelch level. Press and hold the **VOL SQL** key again to set the squelch level and return to the main display.

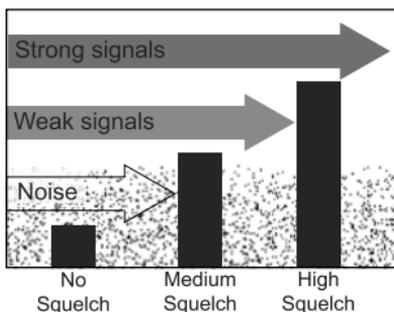

 **Note:** Setting the squelch level too high may prevent you from hearing weaker transmissions. If you are having difficulty hearing a transmission, try setting the squelch level lower.

## Changing the Channel

Press the **Channel Up** and **Channel Down** keys briefly to scroll through the channels one channel at a time. Press and hold the **Channel Up** or **Channel Down** key to quickly scroll through the channels.

## Making a Transmission

Select the channel you want to transmit on, then press and hold the **Push to Talk** key. Release the **Push to Talk** key when you're finished talking to let the other party respond.

- To prevent stuck microphone problems or situations where the **Push to Talk** key is pushed accidentally, the radio limits your talk time to 5 minutes in a single transmission.
- For the best sound quality, hold the microphone about two inches away from your mouth.
- See the channel lists starting on page 22 for a list of receive-only channels.

### Boosting the transmission power

In most situations, the 1 Watt transmission power is all you need. If you find yourself far away from other stations and have trouble getting a response, you may need to boost the transmission power from 1 Watt to 2.5 Watts or 6 Watts:

1. Select the channel you want to transmit on.
2. Press the **L/M/H MEM** key to switch to the next transmission power level (for example, from 6 Watt to 2.5 Watts; from 2.5 Watts to 1 Watt, or from 1 Watt back around to 6 Watts).
3. The display shows the new transmission power in the lower left hand corner. The transmit power remains at the new setting until you change it again.

 **Note: Don't forget to change the transmission setting back to 1 Watt when you move close to other stations.**

- Some channels (for example, channels 13 and 67) limit the transmission power to 1 Watt. When you tune to a limited-power channel, the radio automatically switches to 1 Watt. See the channel lists starting on page 22 for a list of power-restricted channels.
- In an emergency, if you press and hold the **Push to Talk** switch while briefly pressing the **L/M/H MEM** key, the power level changes from 1W to 6W.

## Setting Key Lock

Press the **LOCK UIC** key to lock the radio's keys to prevent accidental entry. "LOCK" displays when Key Lock is active. Press **LOCK UIC** again to unlock the keys.

 **Note: When Key Lock is active, only PTT, Boost, and Power keys are operational.**

## Setting the UIC Channel Mode

The radio comes preset to use International channels. If your current area uses Canadian or US channel assignments, press and hold the **LOCK UIC** key to rotate through the US, Canadian, and international channels.

## Turning the Key Beep On and Off

Key Beep is the tone that sounds when you press a key. To turn Key Beep on or off, press and hold the **Channel Up** or **Channel Down** key while turning the radio on.

## Saving a Channel to Memory

When you find a channel you'd like to keep, press and hold **L/M/H MEM**. Whenever you are on that channel, "**MEM**" displays. Press and hold **L/M/H MEM** again to remove that channel from memory.

## Scanning Channels in Memory

Press **SCAN DUAL** to begin scanning the channels stored in memory. Press **SCAN DUAL** or **WX Alert** to stop scanning.

## Battery Save Feature

The Battery Save feature is an automatic feature that turns off the RX power if there has been no RX or TX activity for 3 seconds. RX power turns back on whenever there is activity.



**Note: Battery Save feature does not work while the radio is in Scan mode.**

## MAINTENANCE AND TROUBLESHOOTING

Due to its rugged design, your radio requires very little maintenance. However, it is a precision electronic instrument, so you should follow a few precautions:

- If the antenna has been damaged, do not transmit except in an emergency situation. Transmitting with a defective antenna may cause further radio damage.
- You are responsible for continued FCC technical compliance of your radio.
- You should arrange for periodic performance checks with your **PRESIDENT** dealer.

## Common Questions

Problem	Things to Try
The radio won't turn on	Charge the radio
The power LED on the charger doesn't turn on	<ul style="list-style-type: none"> <li>- Don't use the charger when the ambient temperature is below 5° C (41° F) or above 40° C (104° F)</li> <li>- Make sure the charging contacts on the radio and charger are clean</li> <li>- Replace the battery</li> </ul>
The radio won't transmit	<p>Make sure you are not in Weather or Scan mode</p> <p>Make sure you are not trying to transmit on a receive-only channel or transmit at the wrong power level for this channel (see the channel lists starting on page 22)</p> <p>Check the battery power level; if it's low, charge the battery before trying to transmit</p> <p>Make sure the duration of each transmission is less than 5 minutes</p>
I can't hear anything from the speaker	Adjust the squelch level; it is probably too high
Noise comes out of the speaker all the time	Adjust the squelch level; it is probably too low
I can transmit, but no one can hear me	Check your UIC channel settings: does the area you are in use different channel assignments?
I'm not getting hazard alerts	Make sure Weather Alert Watch is turned on.
The display flashes, and I don't know why	The channel number on the display will flash if the radio is in a Watch mode or in Scan mode. Try turning off scanning, Weather Alert Watch, Triple Watch, or Dual Watch (see page 13).
Where can I find my radio's serial number?	The serial number is on a plate inside the battery compartment

# SPECIFICATIONS

## **General**

- Channels : All US/International/Canada marine channels, 9 Weather channels
- Frequency Control : PLL
- Frequency Tolerance : Transmit: 1.5 PPM (at 25°C) nominal  
Receive: 1.5 PPM (at 25°C) nominal
- Operating Temperature : -20°C (-4°F) to +55°C (+131°F)
- Antenna : Flexible Whip
- Microphone : Built-in Electret type
- Display : Liquid Crystal Display
- Speaker : 8Ω, 1 Watt
- Power Source : Rechargeable Lithium Ion Battery 7.4V  
1100 mAh
- Size (without antenna) : 5.35 (H) x 2.41 (W) x 1.53 (D) inch  
136 (H) x 62 (W) x 39 (D) mm
- Weight : 8.46 oz (240g) (w/battery and antenna)

## **Transmitter**

- Frequency Range : 156.05 ~ 162.550 MHz
- Frequency Stability : ±10 PPM (nominal)
- Power Output : 1.0 W & 2.5W & 6W
- Spurious Emissions : 70 dBc
- Current Drain : 1500 mA (6W) nominal

## **Receiver**

- Type : Direct Conversion Super Heterodyne Phase Locked Loop system for Local Oscillator
- Frequency Range : 156 ~ 164 MHz
- Sensitivity : 0.20 μV for 12dB SINAD
- Squelch Sensitivity : Threshold 0.2 μV
- Audio Frequency Response : +5.5 dB @ 500 Hz; -6.5 dB @ 2000Hz
- Adjacent Channel Selectivity : 75 dB @ ±25 kHz
- Audio Output Power : 0.7 W @10% THD
- Current Drain : Squelched: 60 mA; Max. Audio: 430 mA

# CHANNELS AND FREQUENCIES (MHZ)

## US Channel Frequencies and Names

US Marine Channels				
Ch	RX Freq	TX Freq	Status	Name
1A	156.050	156.050	Simplex	Vessel traffic system/commercial
5A	156.250	156.250	Simplex	Vessel traffic system/commercial
6	156.300	156.300	Simplex	Inter-shipsafety
7A	156.350	156.350	Simplex	Commercial
8	156.400	156.400	Simplex	Commercial
9	156.450	156.450	Simplex	Non commercial
10	156.500	156.500	Simplex	Commercial
11	156.550	156.550	Simplex	Vessel traffic system
12	156.600	156.600	Simplex	Vessel traffic system
13	156.650	156.650	Simplex,1W	Bridge to bridge
14	156.700	156.700	Simplex	Vessel traffic system
15	156.750	Inhibit	Receiveonly	Environmental
16	156.800	156.800	Simplex	Distress, safety and calling
17	156.850	156.850	Simplex,1W	Govt maritime control
18A	156.900	156.900	Simplex	Commercial
19A	156.950	156.950	Simplex	Commercial
20	161.600	157.000	Duplex	Port operation
20A	157.000	157.000	Simplex	Port operation
21A	157.050	157.050	Simplex	Coast guard only
22A	157.100	157.100	Simplex	Coast guard
23A	157.150	157.150	Simplex	Coast guard only
24	161.800	157.200	Duplex	Marine operator
25	161.850	157.250	Duplex	Marine operator
26	161.900	157.300	Duplex	Marine operator
27	161.950	157.350	Duplex	Marine operator
28	162.000	157.400	Duplex	Marine operator
63A	156.175	156.175	Simplex	Vessel traffic system
65A	156.275	156.275	Simplex	Port operation
66A	156.325	156.325	Simplex	Port operation
67	156.375	156.375	Simplex,1W	Bridge To Bridget

<b>US Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
68	156.425	156.425	Simplex	Non Commercial
69	156.475	156.475	Simplex	Non Commercial
70	156.525	Inhibit	Receive only	Digital Selective Calling
71	156.575	156.575	Simplex	Non Commercial
72	156.625	156.625	Simplex	Non Commercial (Ship-Ship)
73	156.675	156.675	Simplex	Port Operation
74	156.725	156.725	Simplex	Port Operation
75	156.775	156.775	Simplex,1W	Port Operation
76	156.825	156.825	Simplex, 1W	Port Operation
77	156.875	156.875	Simplex,1W	Port Operation (Ship-Ship)
78A	156.925	156.925	Simplex	Non Commercial
79A	156.975	156.975	Simplex	Commercial
80A	157.025	157.025	Simplex	Commercial
81A	157.075	157.075	Simplex	Coast Guard
82A	157.125	157.125	Simplex	Coast Guard
83A	157.175	157.175	Simplex	Government
84	161.825	157.225	Duplex	Marine Operator
85	161.875	157.275	Duplex	Marine Operator
86	161.925	157.325	Duplex	Marine Operator
87	157.375	157.375	Simplex	Marine Operator
88	157.425	157.425	Simplex	Commercial (Ship-Ship)

## **Canadian Channel Frequencies and Names**

<b>Canadian Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TXFreq</b>	<b>Status</b>	<b>Name</b>
1	160.650	156.050	Duplex	Marine Operator
2	160.700	156.100	Duplex	Marine Operator
3	160.750	156.150	Duplex	Marine Operator
4A	156.200	156.200	Simplex	Canadian Coast Guard
5A	156.250	156.250	Simplex	Vessel Traffic System
6	156.300	156.300	Simplex	Inter-Ship Safety
7A	156.350	156.350	Simplex	Commercial
8	156.400	156.400	Simplex	Commercial

<b>Canadian Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
9	156.450	156.450	Simplex	Boater Calling Channel
10	156.500	156.500	Simplex	Commercial
11	156.550	156.550	Simplex	Vessel Traffic System
12	156.600	156.600	Simplex	Vessel Traffic System
13	156.650	156.650	Simplex, 1W	Bridge To Bridge
14	156.700	156.700	Simplex	Vessel Traffic System
15	156.750	156.750	Simplex, 1W	Environmental
16	156.800	156.800	Simplex	Distress, safety, calling
17	156.850	156.850	Simplex, 1W	State Control
18A	156.900	156.900	Simplex	Commercial
19A	156.950	156.950	Simplex	Canadian Coast Guard
20	161.600	157.000	Duplex, 1W	Port Operation
21A	157.050	157.050	Simplex	Canadian Coast Guard
22A	157.100	157.100	Simplex	Canadian Coast Guard
23	161.750	157.150	Duplex	Canadian Coast Guard
24	161.800	157.200	Duplex	Marine Operator
25	161.850	157.250	Duplex	Marine Operator
26	161.900	157.300	Duplex	Marine Operator
27	161.950	157.350	Duplex	Marine Operator
28	162.000	157.400	Duplex	Marine Operator
60	160.625	156.025	Duplex	Marine Operator
61A	156.075	156.075	Simplex	Canadian Coast Guard
62A	156.125	156.125	Simplex	Canadian Coast Guard
63A	156.175	156.175	Simplex	Port Operation
64	160.825	156.225	Duplex	Marine Operator
64A	156.225	156.225	Simplex	Port Operation
65A	156.275	156.275	Simplex	Port Operation
66A	156.325	156.325	Simplex, 1W	Port Operation
67	156.375	156.375	Simplex	Bridge To Bridge
68	156.425	156.425	Simplex	Non Commercial
69	156.475	156.475	Simplex	Non Commercial
70	156.525	Inhibit	Receive only	Digital Selective Calling
71	156.575	156.575	Simplex	Non Commercial
72	156.625	156.625	Simplex	Non Commercial

<b>Canadian Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
73	156.675	156.675	Simplex	Port Operation
74	156.725	156.725	Simplex	Port Operation
75	156.775	156.775	Simplex, 1W	Port Operation
76	156.825	156.825	Simplex, 1W	Port Operation
77	156.875	156.875	Simplex, 1W	Port Operation
78A	156.925	156.925	Simplex	Inter Ship
79A	156.975	156.975	Simplex	Inter Ship
80A	157.025	157.025	Simplex	Inter Ship
81A	157.075	157.075	Simplex	Canadian Coast Guard
82A	157.125	157.125	Simplex	Canadian Coast Guard
83	161.775	157.175	Duplex	Canadian Coast Guard
83A	157.175	157.175	Simplex	Canadian Coast Guard
84	161.825	157.225	Duplex	Marine Operator
85	161.875	157.275	Duplex	Marine Operator
86	161.925	157.325	Duplex	Marine Operator
87	157.375	157.375	Simplex	Port Operation
88	157.425	157.425	Simplex	Port Operation

## **International Channel Frequencies and Names**

<b>International Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
1	160.650	156.050	Duplex	Marine operator
2	160.700	156.100	Duplex	Marine operator
3	160.750	156.150	Duplex	Marine operator
4	160.800	156.200	Duplex	Marine operator
5	160.850	156.250	Duplex	Marine operator
6	156.300	156.300	Simplex	Inter-ship safety
7	160.950	156.350	Duplex	Marine operator
8	156.400	156.400	Simplex	Commercial (ship-ship)
9	156.450	156.450	Simplex	Boater calling channel
10	156.500	156.500	Simplex	Commercial
11	156.550	156.550	Simplex	Vessel traffic system
12	156.600	156.600	Simplex	Vessel traffic system
13	156.650	156.650	Simplex	Bridge to bridge

<b>International Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
14	156.700	156.700	Simplex	Vessel traffic system
15	156.750	156.750	Simplex, 1W	Environmental
16	156.800	156.800	Simplex	Distress, safety, calling
17	156.850	156.850	Simplex, 1W	Govt maritime control
18	161.500	156.900	Duplex	Port operation
19	161.550	156.950	Duplex	Commercial
20	161.600	157.000	Duplex	Port operation
21	161.650	157.050	Duplex	Port operation
22	161.700	157.100	Duplex	Port operation
23	161.750	157.150	Duplex	Marine operator
24	161.800	157.200	Duplex	Marine operator
25	161.850	157.250	Duplex	Marine operator
26	161.900	157.300	Duplex	Marine operator
27	161.950	157.350	Duplex	Marine operator
28	162.000	157.400	Duplex	Marine operator
60	160.625	156.025	Duplex	Marine operator
61	160.675	156.075	Duplex	Marine operator
62	160.725	156.125	Duplex	Marine operator
63	160.775	156.175	Duplex	Marine operator
64	160.825	156.225	Duplex	Marine operator
65	160.875	156.275	Duplex	Marine operator
66	160.925	156.325	Duplex	Marine operator
67	156.375	156.375	Simplex	Bridge to bridge
68	156.425	156.425	Simplex	Non commercial
69	156.475	156.475	Simplex	Non commercial
70	156.525	Inhibit	Receive only	Digital Selective Calling
71	156.575	156.575	Simplex	Non commercial
72	156.625	156.625	Simplex	Non commercial
73	156.675	156.675	Simplex	Port operation
74	156.725	156.725	Simplex	Port operation
75	156.775	156.775	Simplex, 1W	Port operation
76	156.825	156.825	Simplex, 1W	Port operation
77	156.875	156.875	Simplex	Port operation (ship-ship)
78	161.525	156.925	Duplex	Port operation

<b>International Marine Channels</b>				
<b>Ch</b>	<b>RX Freq</b>	<b>TX Freq</b>	<b>Status</b>	<b>Name</b>
79	161.575	156.975	Duplex	Port operation
80	161.625	157.025	Duplex	Port operation
81	161.675	157.075	Duplex	Port operation
82	161.725	157.125	Duplex	Port operation
83	161.775	157.175	Duplex	Port operation
84	161.825	157.225	Duplex	Marine operator
85	161.875	157.275	Duplex	Marine operator
86	161.925	157.325	Duplex	Marine operator
87	157.375	157.375	Simplex	Marine operator
88	157.425	157.425	Simplex	Marine operator

## **Weather Channel Frequencies and Names**

<b>Channel</b>	<b>RX</b>	<b>Channel</b>	<b>RX</b>
WX01	162.5500	WX06	162.5000
WX02	162.4000	WX07	162.5250
WX03	162.4750	WX08	161.6500
WX04	162.4250	WX09	161.7750
WX05	162.4500		

# REGULATIONS AND SAFETY WARNINGS

## Basic Radio Guidelines

You should familiarize yourself with the rules on marine radios and be aware of which rules apply to your boat.

Complete guidelines for all ship and marine radio types can be found at the US Coast Guard website under the topic Radio Info for Boaters (the direct link is <http://www.navcen.uscg.gov/marcomms/boater.htm>).

Here are a few guidelines that affect nearly all boaters.

- If you have a VHF radio on your boat, you must maintain a watch on channel 16 (156.800 MHz) whenever the radio is not being used to communicate. Starting in 2004, if a radio is carried, it must be on and set to channel 16 whenever your boat is underway.
- If you hear a distress call, wait a few minutes to let a shore station or Coast Guard vessel respond. If no other WARNING! Read this information before using the radio station has responded after 5 minutes, you must respond to the distress call.
- Do not make false mayday or distress calls as a prank or to test your radio. (This is essentially like making a false 9-1-1 call; you may be subject to fines.)

## FCC/Industry Canada Information

- Certification: FCC Part 80 or RSS-182
- Output Power: 6W
- Emission: 16K0F3E
- Transmitter Frequency Range: 156.025-157.425 MHz

This device complies with Part 15 of the FCC Rules.

Operation is subject to the condition that this device does not cause harmful interference.

Unauthorized changes or modifications to this equipment may void compliance with the FCC Rules. Any change or modification must be approved in writing by PRESIDENT.

Changes or modifications not approved by PRESIDENT could void the user's authority to operate the equipment.

## FCC RF Exposure Information

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

**WARNING!** It is up to the user to properly operate this radio.

Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result.

## Body-Worn Operation

This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, body-worn operations are restricted to the supplied belt-clip. For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided. For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Lithium Ion Battery Warning

This equipment contains a rechargeable Lithium Ion battery.

The rechargeable Lithium Ion battery contained in this equipment may explode if disposed of in a fire.

Do not short-circuit the battery.

Do not charge the rechargeable battery used in this equipment in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

 **NOTE: Li-Ion batteries must be recycled or disposed of properly.**

Avoid exposing the battery (whether attached to the radio or not) to direct sunlight, heated cars, or temperatures below  $-4^{\circ}\text{F}$  ( $-20^{\circ}\text{C}$ ) or above  $+140^{\circ}\text{F}$  ( $+60^{\circ}\text{C}$ ). Exposing the chemical contained within the battery pack to temperatures above  $+140^{\circ}\text{F}$  ( $+60^{\circ}\text{C}$ ) may cause the battery to rupture, fail, or reduce performance.

In case of exposure to the cell contents, wash the affected area thoroughly, and seek medical attention.

## Three Year Limited Warranty

This transceiver has a 3 years warranty for materials and workmanship in its country of purchase against any manufacturing defect recognized by our technical department. It is recommended to read carefully following conditions and to respect them in order not to loose it.

- Any repair under warranty will be free of charge and the transport costs for sending back will be on charge of our company.
- A proof of purchase must compulsorily be added to the transceiver in need of repair.
- Don't install your transceiver without having read this instructions manual.
- Our technical department won't send nor exchange any spare parts as part of warranty.

### ***Are not covered***

- The battery pack.
- Damages caused by accident , shock , inadequate packing or the use of accessories that are not in conformity.
- Interventions that modified the conformity features, repairs or modifications done by third parties which are not agreed by our company.
- Any opening of the housing cancels the warranty.

GOUPE PRESIDENT ELECTRONICS  
SIÈGE SOCIAL / HEAD OFFICE - FRANCE  
Route de Sète - BP 100 - 34540 BALARUC  
Email: [groupe@president-electronics.com](mailto:groupe@president-electronics.com)  
Website: <http://www.president-electronics.com>



Groupe  
**PRESIDENT**  
**ELECTRONICS**

SIÈGE SOCIAL / HEAD OFFICE - FRANCE  
Route de Sète - BP 100 - 34540 BALARUC  
Site internet : <http://www.president-electronics.com>  
Email : [groupe@president-electronics.com](mailto:groupe@president-electronics.com)



1408/11-13  
**U01UT647BZZ(0)**